


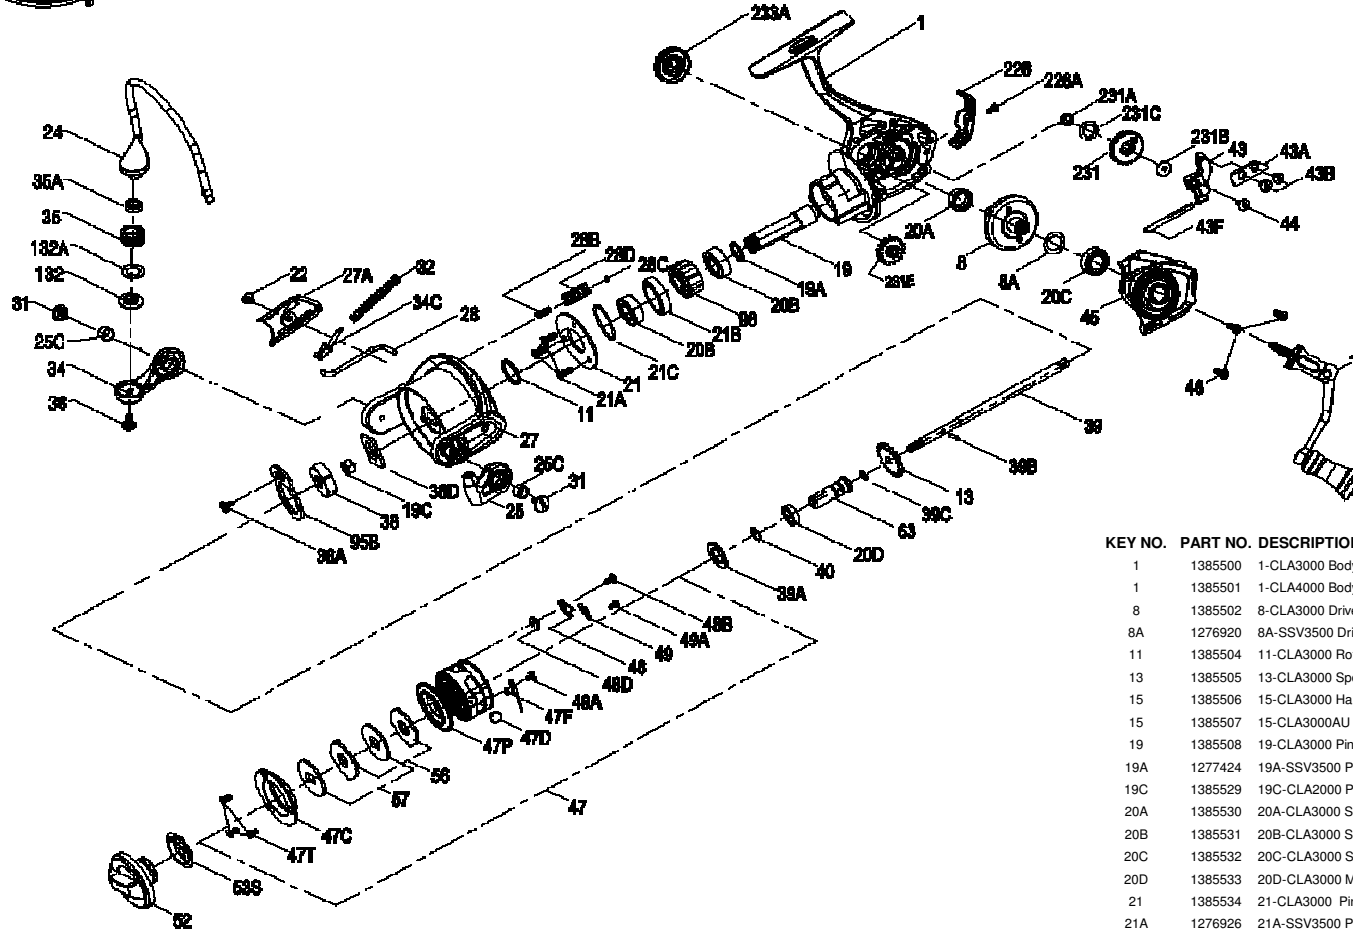

PARTS LIST FOR MODEL CLASH3000/CLASH3000AU/CLASH4000/CLASH4000AU



KEY NO. PART NO. DESCRIPTION

28C	1385547	28C-CLA3000 Rotor Brake Seal
28D	1385545	28D-CLA3000 Rotor Brake
31	1385548	31-CLA3000 Ball Arm Screw (2req.)
32	1385549	32-CLA3000 Ball Spring
34	1385550	34-CLA3000 Ball Arm
34C	1385551	34C-CLA3000 Pivot Arm
35	1276939	35-SSV3500 Line Roller
35A	1385552	35A-CLA3000 Line Roller Sealed Ball Bearing
36	1277061	36-SSV5500 Line Roller Screw
38	1385623	38-CLA2000 Rotor Nut
38A	1385624	38A-CLA2000 Rotor Nut Lock Plate Screw
38D	1385555	38D-CLA3000 Rotor Washer
39	1385556	39-CLA3000 Main Shaft
39	1385557	39-CLA4000 Main Shaft
39A	1385558	39A-CLA3000 Spool Adjust Washer
39B	1385559	39B-CLA3000 Main Shaft Pin
39C	1385560	39C-CLA3000 Main Shaft Seal
40	1385588	40-CLA3000 Main Shaft Bushing O-Ring(2req.)
43	1385561	43-CLA3000 O/S Slider
43A	1385562	43A-CLA3000 O/S Slider Guide
43B	1277070	43B-SSV5500 O/S Slider Guide Screw(2req.)
43F	1385563	43F-CLA3000 Guide Shaft
44	1385564	44-CLA3000 Main Shaft Screw
45	1385565	45-CLA3000 Body Cover
45	1385566	45-CLA4000 Body Cover
46	1385567	46-CLA3000 Body Cover Screw (3req.)
47	1385569	47-CLA3000 Spool Assembly
47	1385570	47-CLA4000 Spool Assembly
47C	1385571	47C-CLA3000 Drag Cover
47D	1276953	47D-SSV3500 Line Clip
47F	1385572	47F-CLA3000 Line Clip Retainer
47P	1385573	47P-CLA3000 Spool
47P	1385574	47P-CLA4000 Spool
47T	1341544	47T-SSV7500LC Rear Cover Screw(3req.)
48	1385578	48-CLA3000 Spool Click Plate
48B	1385581	48B-CLA3000 Spool Clicker Spring Screw
48D	1385579	48D-CLA3000 Spool Clicker Spacer Ring
49	1385580	49-CLA3000 Spool Click Spring
49A	1341547	49A-SSV7500LC Spool Clicker Spring Screw(2req.)
52	1385582	52-CLA3000 Drag Knob Assembly
53S	1385583	53S-CLA3000 Drag Knob Seal
56	1385584	56-CLA3000 Drag Friction Washer (2req.)
57	1385585	57-CLA3000 Keyed Drag Washer (2req.)
57	1385586	57-CLA4000 Keyed Drag Washer (2req.)
63	1385587	63-CLA3000 Main Shaft Bushing
95B	1385647	95B-CLA2000 Rotor Nut Locking Plate
98	1276966	98-SSV3500 Clutch/Sleeve Assembly
132	1277096	132-SSV5500 Line Roller Collar
132A	1277097	132A-SSV5500 Line Roller Washer
226	1385590	226-CLA3000 Rear Cover
226A	1385591	226A-CLA3000 Rear Cover Screw
231	1385592	231-CLA3000 O/S Gear
231	1385593	231-CLA4000 O/S Gear
231A	1385595	231A-CLA3000 O/S Gear Bushing
231B	1385596	231B-CLA3000 O/S Gear Screw
231C	1385594	231C-CLA3000 O/S Gear Washer
231E	1385597	231E-CLA4000 Slow O/S Gear
233A	1385598	233A-CLA3000 Handle Cap

KEY NO. PART NO. DESCRIPTION

1	1385500	1-CLA3000 Body Assembly
1	1385501	1-CLA4000 Body Assembly
8	1385502	8-CLA3000 Drive Gear
8A	1276920	8A-SSV3500 Drive Gear Shim Washer
11	1385504	11-CLA3000 Rotor Seal
13	1385505	13-CLA3000 Spool Clicker Gear
15	1385506	15-CLA3000 Handle Assembly
15	1385507	15-CLA3000AU Handle Assembly
19	1385508	19-CLA3000 Pinion Gear
19A	1277424	19A-SSV3500 Pinion Gear Washer
19C	1385529	19C-CLA2000 Pinion Gear POM Bushing
20A	1385530	20A-CLA3000 Sealed Ball Bearing
20B	1385531	20B-CLA3000 Sealed Ball Bearing (2req.)
20C	1385532	20C-CLA3000 Sealed Ball Bearing
20D	1385533	20D-CLA3000 Main Shaft Sealed Ball Bearing
21	1385534	21-CLA3000 Pinion Bearing Retainer
21A	1276926	21A-SSV3500 Pinion Retainer Screw (3req.)
21B	1385535	21B-CLA3000 Pinion Ball Bearing Collar
21C	1385536	21C-CLA3000 Pinion Ball Bearing Collar Seal
22	1122148	22-CLA3000 Rotor Cover Screw
24	1385537	24-CLA3000 Bail Assembly
24	1385538	24-CLA4000 Bail Assembly
25	1385539	25-CLA3000 Bail Holder
25C	1385540	25C-CLA3000 Bail Arm Bushing (2req.)
27	1385541	27-CLA3000 Rotor Assembly
27	1385542	27-CLA4000 Rotor Assembly
27A	1389427	27A-CLA3000 Rotor Cover
27A	1389434	27A-CLA4000 Rotor Cover
28	1385543	28-CLA3000 Bail Trip Lever
28	1385544	28-CLA4000 Bail Trip Lever
28B	1385546	28B-CLA3000 Rotor Brake Spring